



Power On / Off	Disabled
PTT	Push to talk button
Volume Up	Increase Volume
Volume Down	Decrease Volume
Function Key F1	Menu Select
Function Key F2	Cursor Down
Function Key F3	Cursor Up
Function Key F4	OK / Enter
Function Key F5	Reset / Cancel / Clear
Function Key F6	Call Base

- To set up a call use the keypad to select the ID or the person who you wish talk to and press the PTT button or the # button. The call will be setup.
- To end a call press the F5 orange button on the top of the microphone.
- To send a status message use the up down buttons on the front of the keypad microphone to select the desired message then press the PTT button.
 - The screen will show outgoing, then engaged then confirmed.
 - The status messages you can send are as follows
Hired - For Hire (4hire) - Off Duty (Oduy)

Message Overview

When the message is received it will appear on the display and the radio will alert every 5 seconds.

If a call is received whilst the message is on the screen, the calling id and time will be displayed. When the call is finished, the message will reappear on the display.

To permanently delete the message if it is displayed on screen press the PTT(press to talk) button.

To store the message or to initiate a call whilst the message is displayed press the orange button on the top of the microphone and make a call as normal, the radio will display an envelope in the bottom left corner, indicating it has a stored message.

To view or delete stored messages press the "M" button followed by "ok" button, the display will read stored calls #01 press the up or down arrows to select the right message then "ok" select "more" to display the whole message or "delete" to remove.

At any time pressing the orange button (F5 / clear) will exit menus.